


XAG[®] Local Network Terminal

User Manual

Version AU V1.0 **EN**

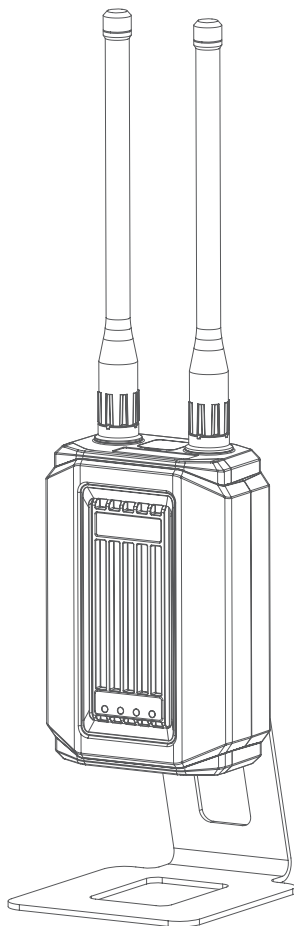

Disclaimer

Carefully read and understand this User Manual before using this product for the first time. Failure to read and follow the instructions may result in serious injury to yourself and/or others, damage to your Products and/or other objects in the vicinity. By using this product, you hereby signify that you have read this document carefully and that you understand and agree to abide by all terms and conditions of this document and all relevant documents of this product. You agree that you are solely responsible for your own conduct while using this product, and for any consequences thereof. XAG accepts no liability for damage, injury, or any legal responsibility incurred directly or indirectly from the use of this product.

XAG reserves the rights for final interpretation and revision of the Terms and conditions herein to the extent permitted by law. XAG also has the right to update, modify or terminate these terms and conditions via its official website without prior notice.

This document and all other collateral documents are subject to change without prior notice at the sole discretion of XAG.

Warning


This product must be operated with Strong safety awareness. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by those who are under 18 years old. DO NOT alter this product or use this product with incompatible components or parts.

CONTENT


Disclaimer	3
Warning	3
List of Items	5
Overview – Local Network Terminal	6
Installation Guide	7
Power ON/OFF	7
Indicators	8
Device & Network Setup	9
Technical Specifications	15

List of Items


Please see that all the following items are present when unpacking the box. Should there be any item missing, please contact your seller immediately.

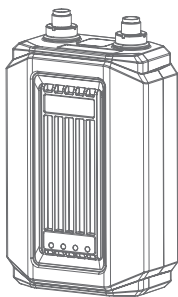


Local Network Terminal (LNT)
x1

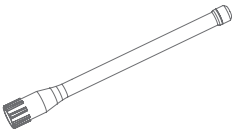

Antenna
x2

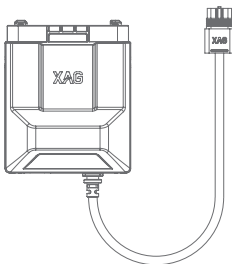


Power Adapter
x1

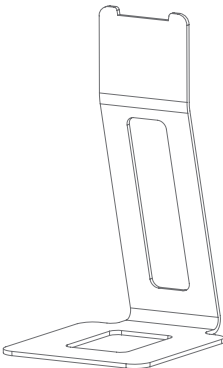


Stand
x1

Overview – Local Network Terminal

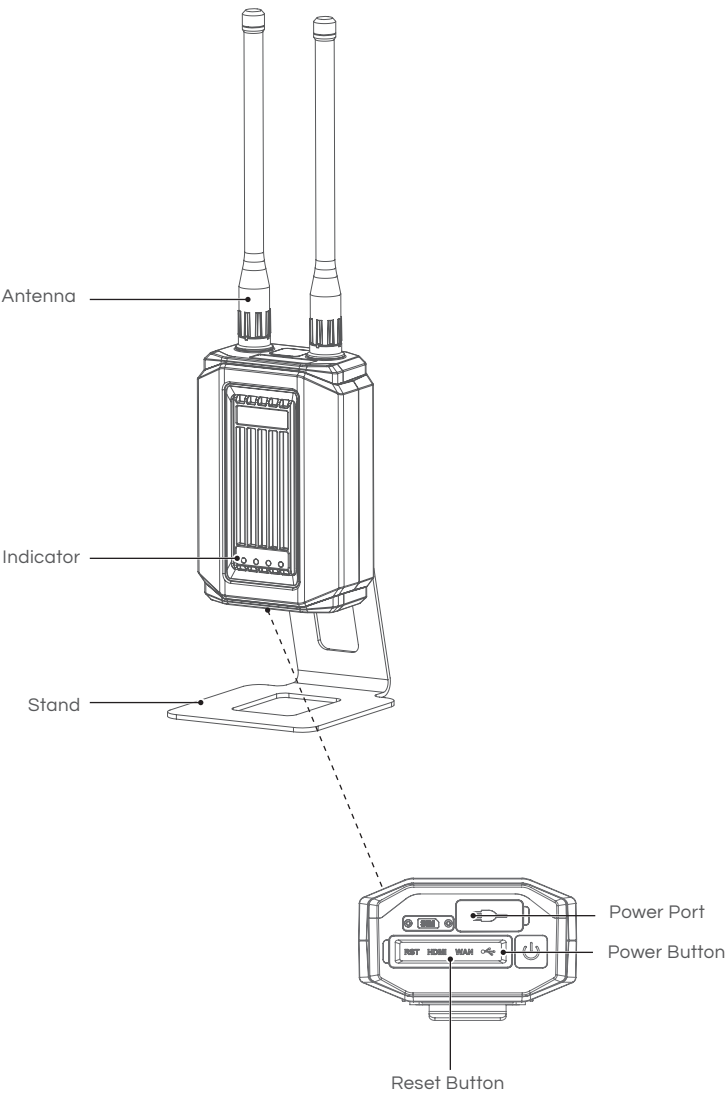

Installation Guide

01. Assemble the antennas
02. Connect the Terminal of the Power Adapter to the Battery Terminal
03. Connect the Output plug of the Power Adapter to the LNT Power port
04. Place the LNT on the stand

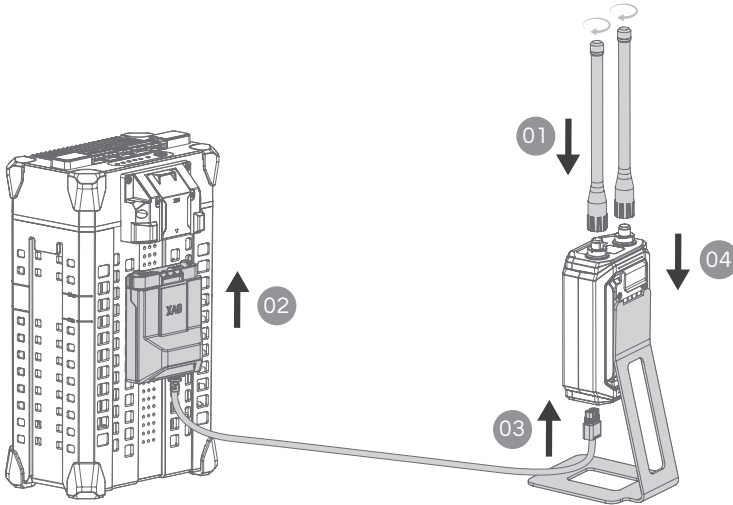

Power ON/OFF

Power ON

Press and hold the Power button on the LNT for at least 1 second and release after the first indicator turns on. The device may take up to 10 minutes for the initialization, the initialization is completed approximately 2 minutes after the System Indicator (4th indicator) stops flashing and is Solid Green, indicating the LNT is ready to be used.

Power OFF

Press and hold the Power button on the LNT until the 2nd, 3rd, and 4th indicator flashes. LNT is OFF when all indicators are OFF.


IMPORTANT

DO NOT turn off the Battery or disconnect the power cable until LNT is OFF. Powering off the LNT immaturely may lead to system corruption and system failure. User will be solely responsible for any failure due to system corruption.

Indicators

			
Power	WLAN	WAN	System
Behaviour		Description	
Power - On		Device On	
Power - Off		Device Off/Error	
WLAN - On		Wi-Fi networking function normal	
WLAN - Flashing		Wi-Fi network is busy	
WLAN - Off		Wi-Fi network error	
WAN - On		Access to WAN for data synchronization	
WAN - Flashing		Wi-Fi network is busy	
WAN - Off		Wi-Fi network fails to access WAN	
System - On		Device is normal	
System - Flashing		Device is busy	

Device & Network Setup

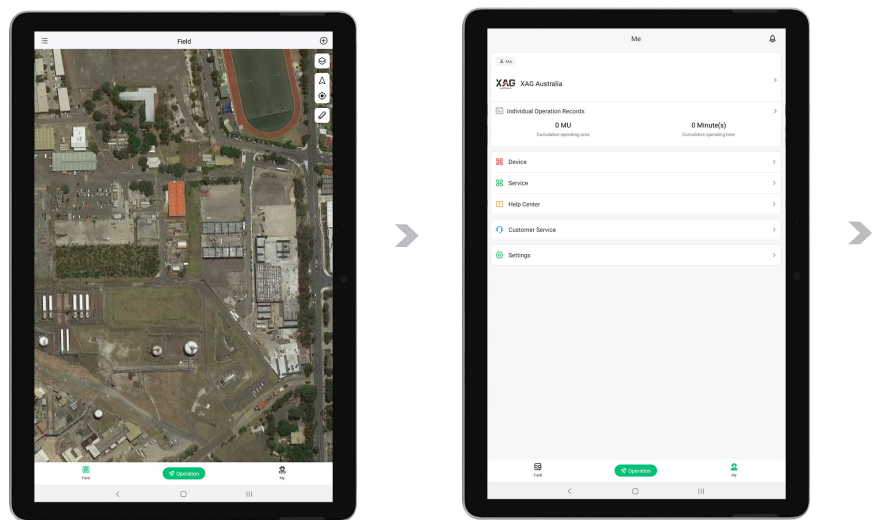

01. Power ON the Local Network Terminal (LNT).

 Notes

Device initialization may take up to 10 minutes, the initialization is completed approximately 2 minutes after the System Indicator (4th indicator) stops flashing and is Solid Green, indicating the LNT is ready to be used.

02. Select and Connect to the Local Network Terminal via Wi-Fi.

Default LNT Wi-Fi Network:

XAG-XXXX



Default LNT Wi-Fi Password:

20070401



03. Open  XAG One APP.

04. Tap on “My” to access Account Menu.



05. Tap on “Device”.

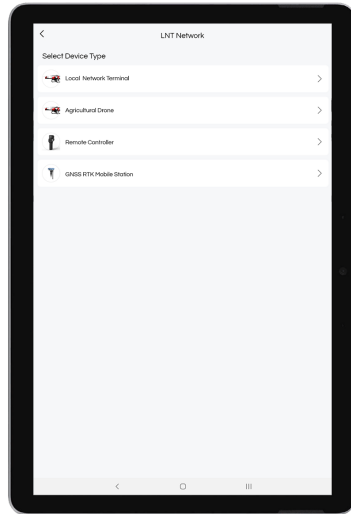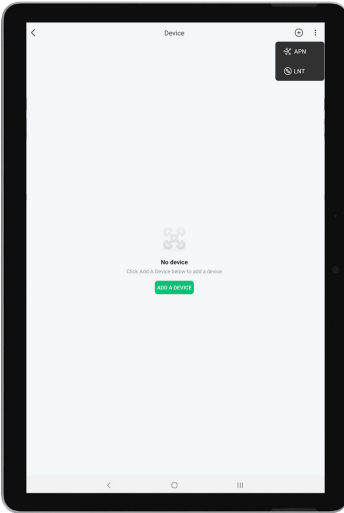

06. Tap on “ ⋮ ” for more options, then Tap on “  ” for Device Binding.
07. Tap on “Local Network Terminal” to start Binding.

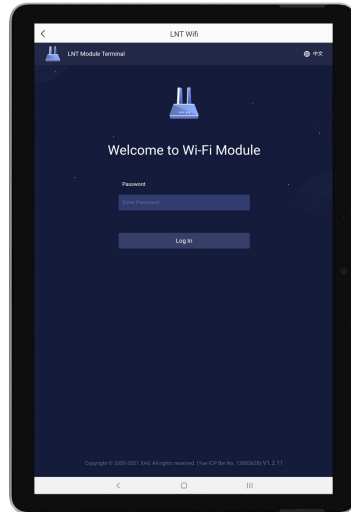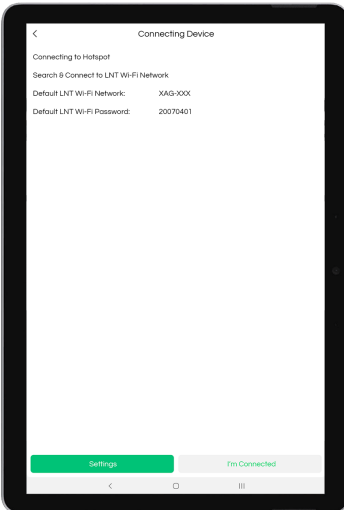

08. Tap on “I’m Connected” to access Equipment Network Settings”.
09. Enter the password and login to the Module to edit Settings.
Default LNT Admin Password: 20070401

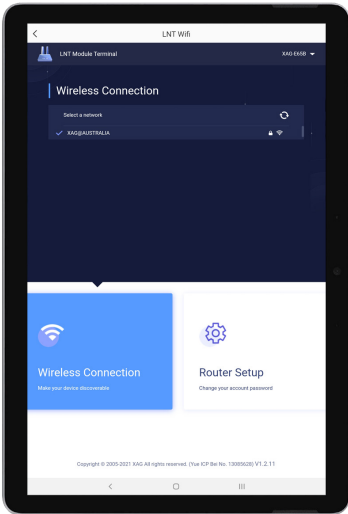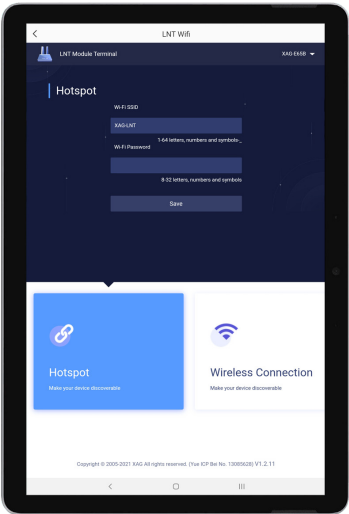

10. Select the corresponding Options for setting

 **Hotspot**

Settings for Hotspot to share the LNT's Wi-Fi or Internet data connection with nearby XAG devices. Connections can be shared with up to XX devices.

 Notes

Default LNT Wi-Fi Network:

XAG-XXXX
("XXXX" is the last 4 digit of the MAC Address on the top of the LNT)

Default LNT Password:

 
20070401

 **Wireless Connection**

Settings for External Wi-Fi to provide internet connectivity for the LNT

 Notes

The connection Status of the External Wi-Fi is indicated by the WAN Indicators (3rd Indicator)

Solid Green		Successful Connection with Internet Connectivity
Flashing Yellow		Network Configuring
OFF		Unsuccessful Connection

 **Router Setup**

Administrator Settings for Local Network Terminal

Technical Specifications

Local Network Terminal	
Model	13LNT-1
Dimensions	93mm x 54mm x 332mm
Weight	Approx. 760g
Power Input	DC 12V/3A
Operating Temperature	0° - 50° C
IP Rating	IP54
Communication Protocol	Wi-Fi
Operating Frequency	2400 – 2483.5 MHz
Antenna	TNC Port, 2dBi
Warranty Period	12 Months
Power Adapter	
Dimensions	101mm x 86mm x 37mm
Weight	Approx. 335g
Power Input	DC 40 ~ 54V (B13960S Battery Adaptor)
Power Output	DC 12V/3A
Power	36W
Operating Temperature	0° - 50° C
IP Rating	IP54



Copyright©2022 XAG Australia All Rights Reserved

The copyright of all information in this user manual (including but not limited to any text description, illustrations, photos, methods, processes, etc.) belongs to XAG Australia and is protected by copyright law. No individual or organization may imitate, extract, translate, distribute or reproduce or quote all the contents of this manual without any written authorization.